

# SPLIT TYPE ROOM AIR CONDITIONER



For Split Wall Mounted

Series R32 Inverter

Model Type For J

# Service Manual

2018

# CONTENTS

---

Product Specification.....	1
Refrigeration Diagram.....	3
Wiring Diagram.....	6
Troubleshooting Guide.....	9


*Chapter 1 Product Specification*

1.1 Photo of Product

***Indoor Unit***



***Outdoor Unit***

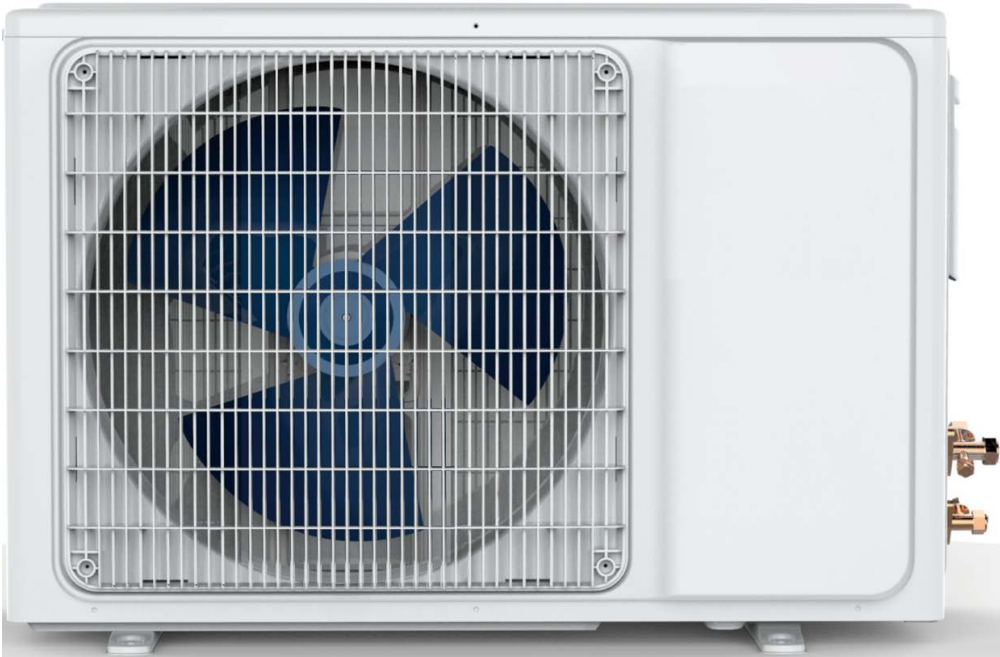

## 1.2 Outline Dimensions

### Indoor Unit

MODEL		9000BTU	12000BTU	18000BTU	24000BTU
W	mm	792	792	940	1132
D	mm	292	292	316	330
H	mm	201	201	224	332


### Outdoor Unit

MODEL		9000BTU	12000BTU	18000BTU	24000BTU
W	mm	730	730	800	900
D	mm	285	285	315	350
H	mm	545	545	545	700


# Chapter 2 Refrigeration Diagrams

## 2.1 Cooling Only

### Cooling Mode

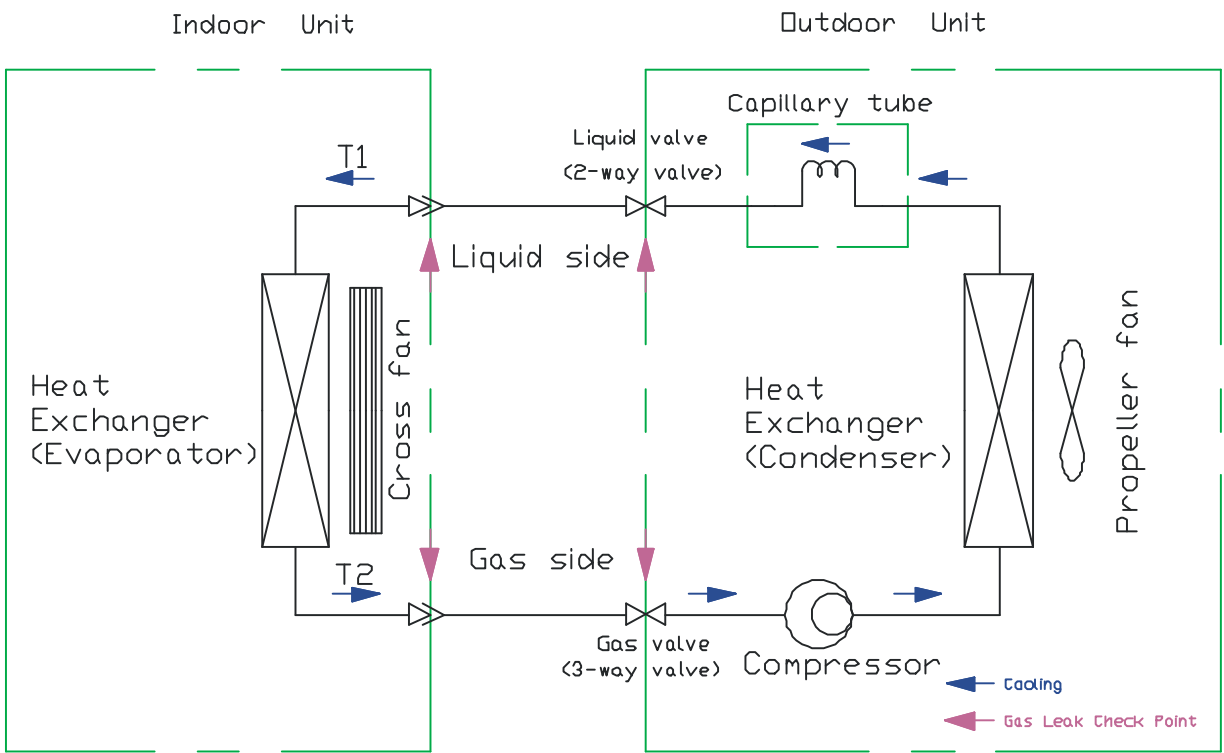


### Cooling Cycle

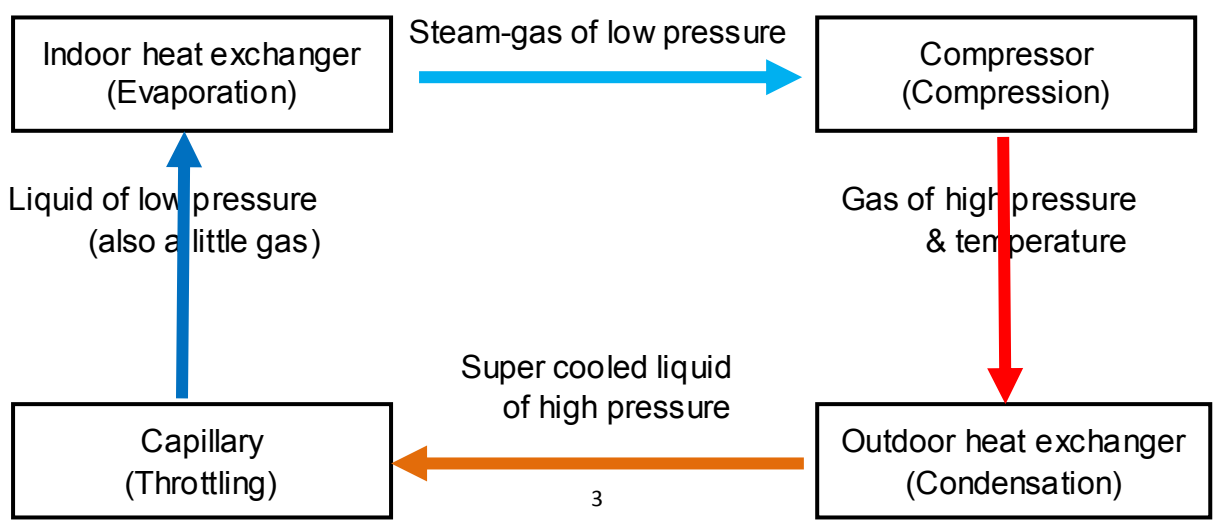


## 2.2 Cooling & Heating


### Cooling Mode

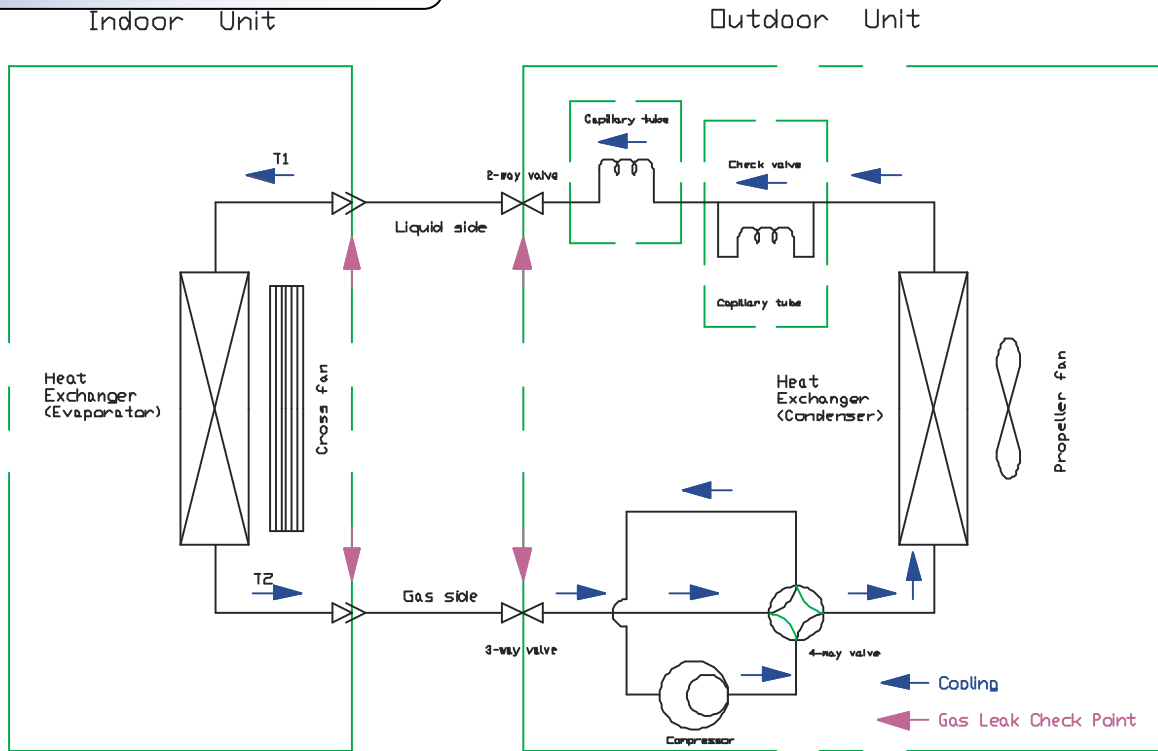


### Cooling Cycle

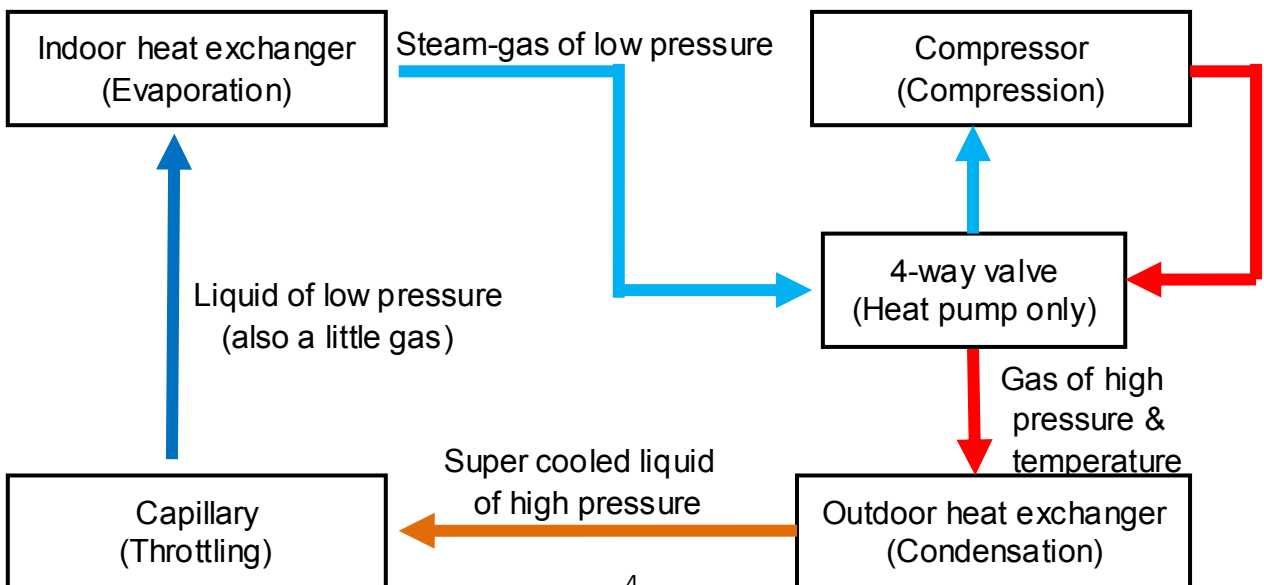

# Heating Mode

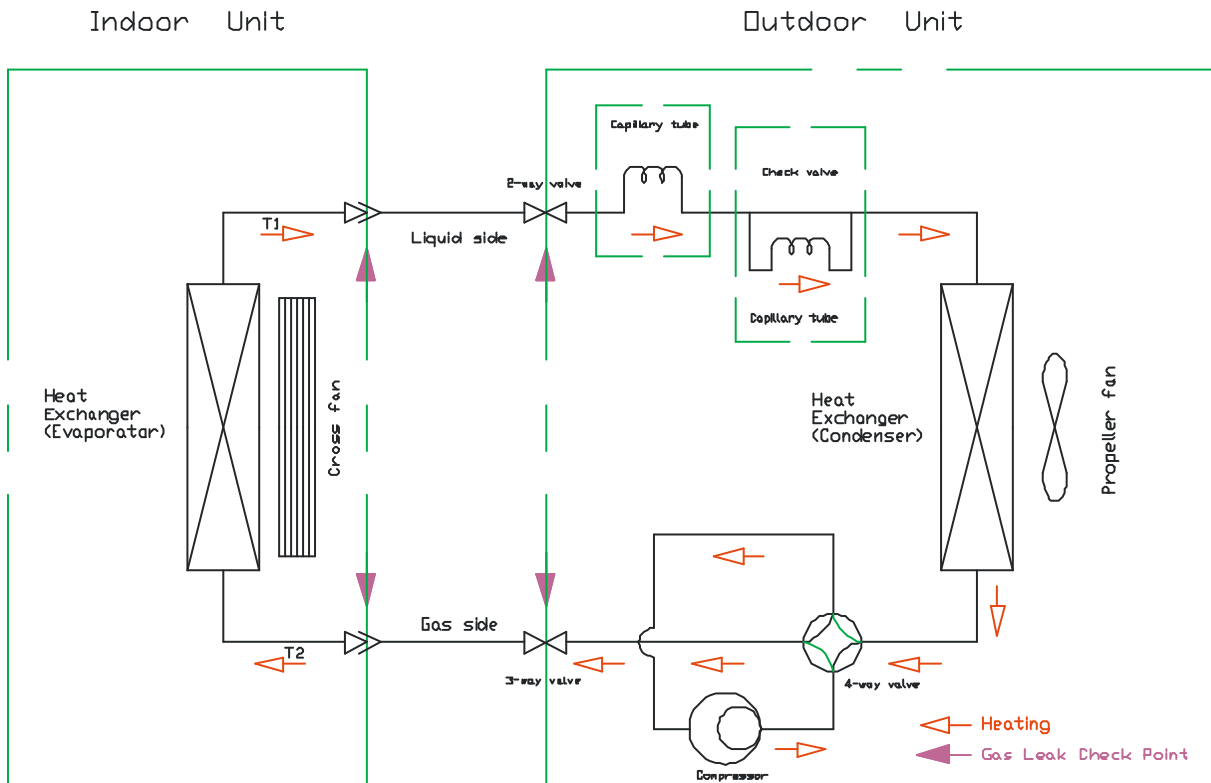

# Heating Cycle

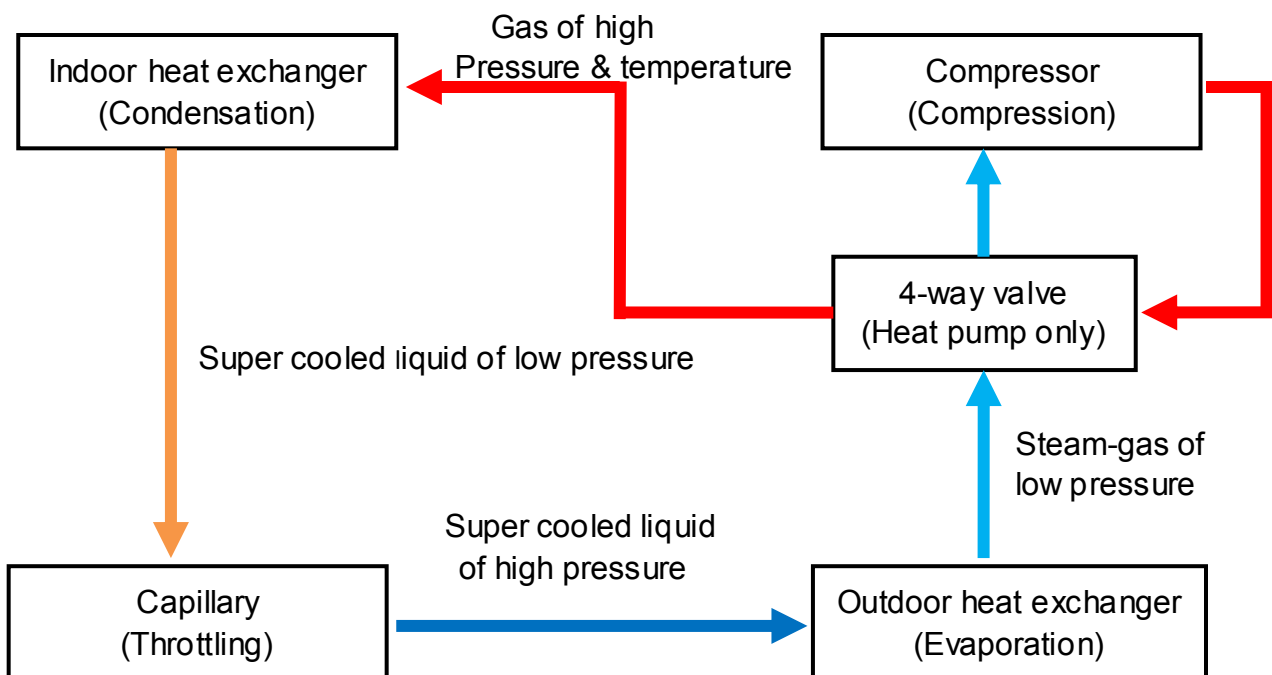


# Chapter 3 Wiring Diagram

## Indoor unit

### Electric chart for 09/12/18/24K


NOTE: If used as MONO unit, for the standby control needs, the cross section area of cable connected to L, Lo, N, S must be sufficient for the maximum system current. The maximum system current is equal to the sum of indoor unit and outdoor unit rated current. If used as MULTI unit, L in the terminal block does not need to be connected.

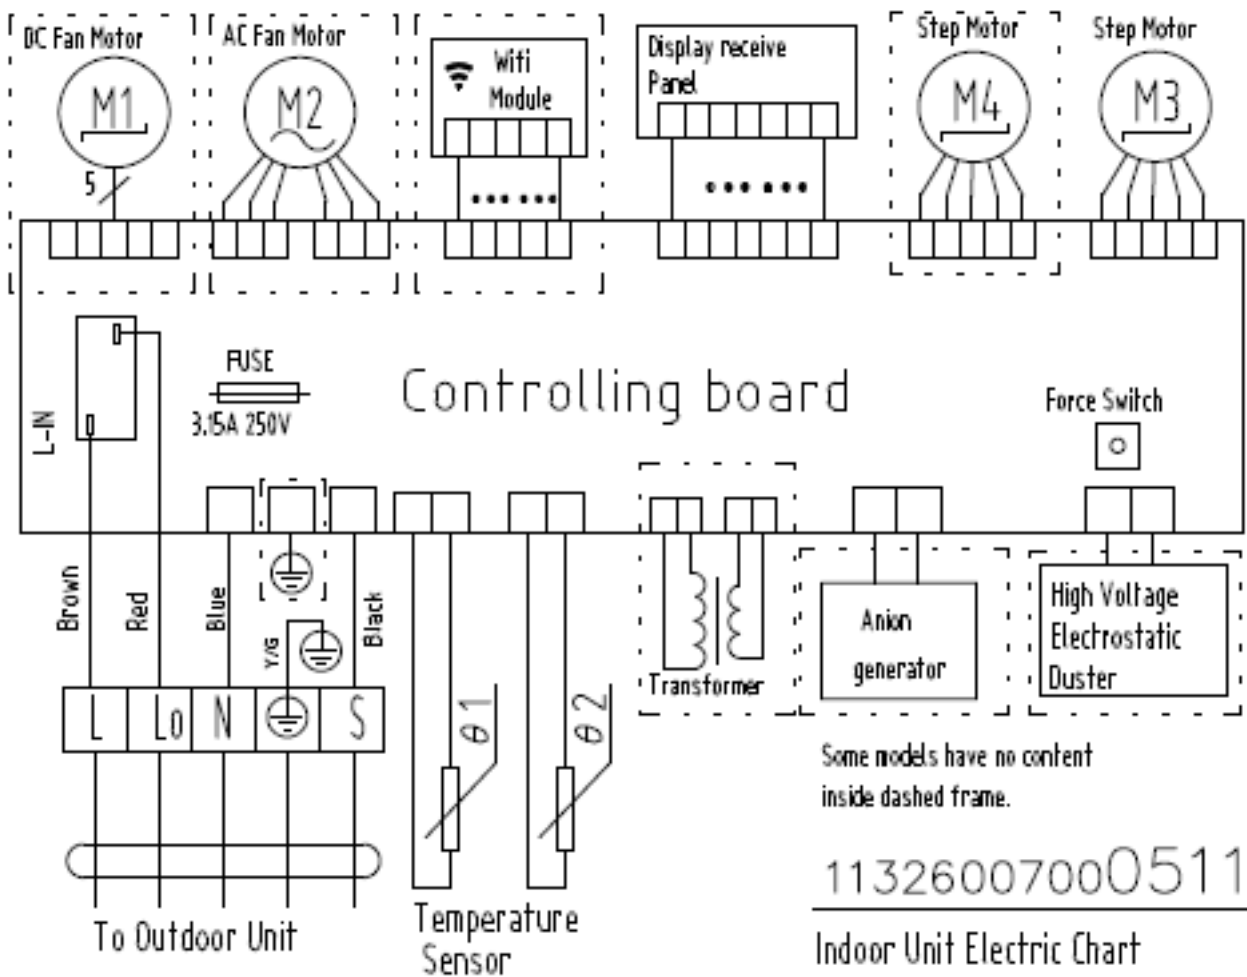




# Outdoor unit

## Electric chart for 09/12/18K

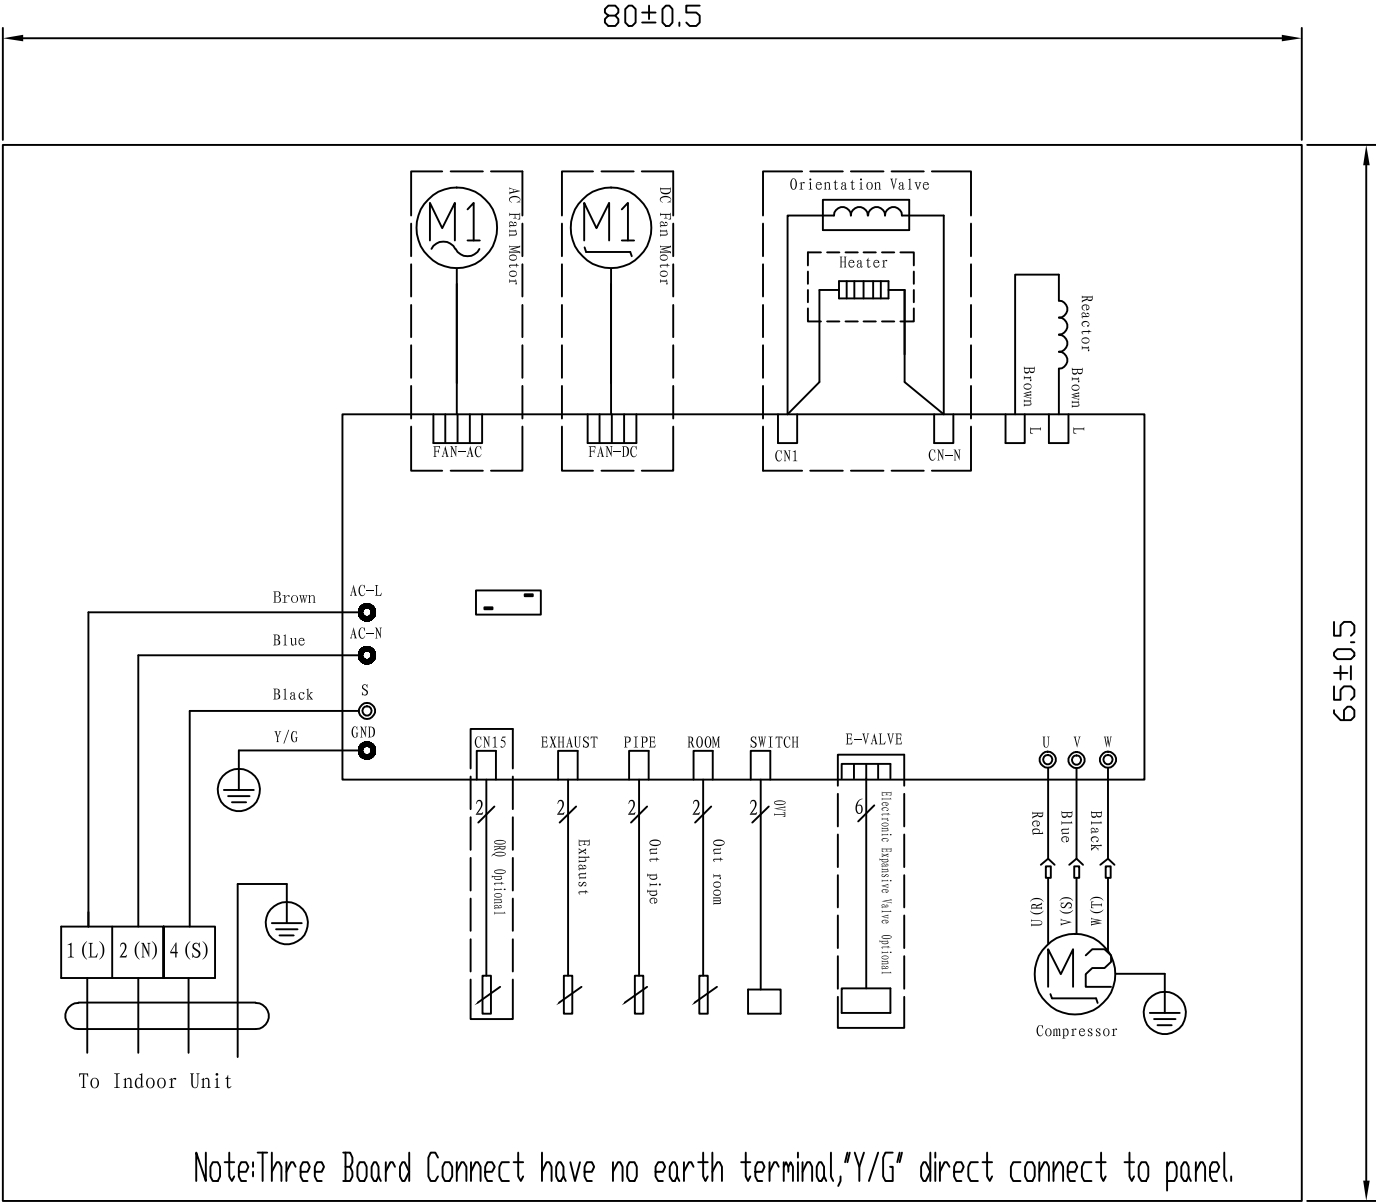

# Outdoor unit

## Electric chart for 24K

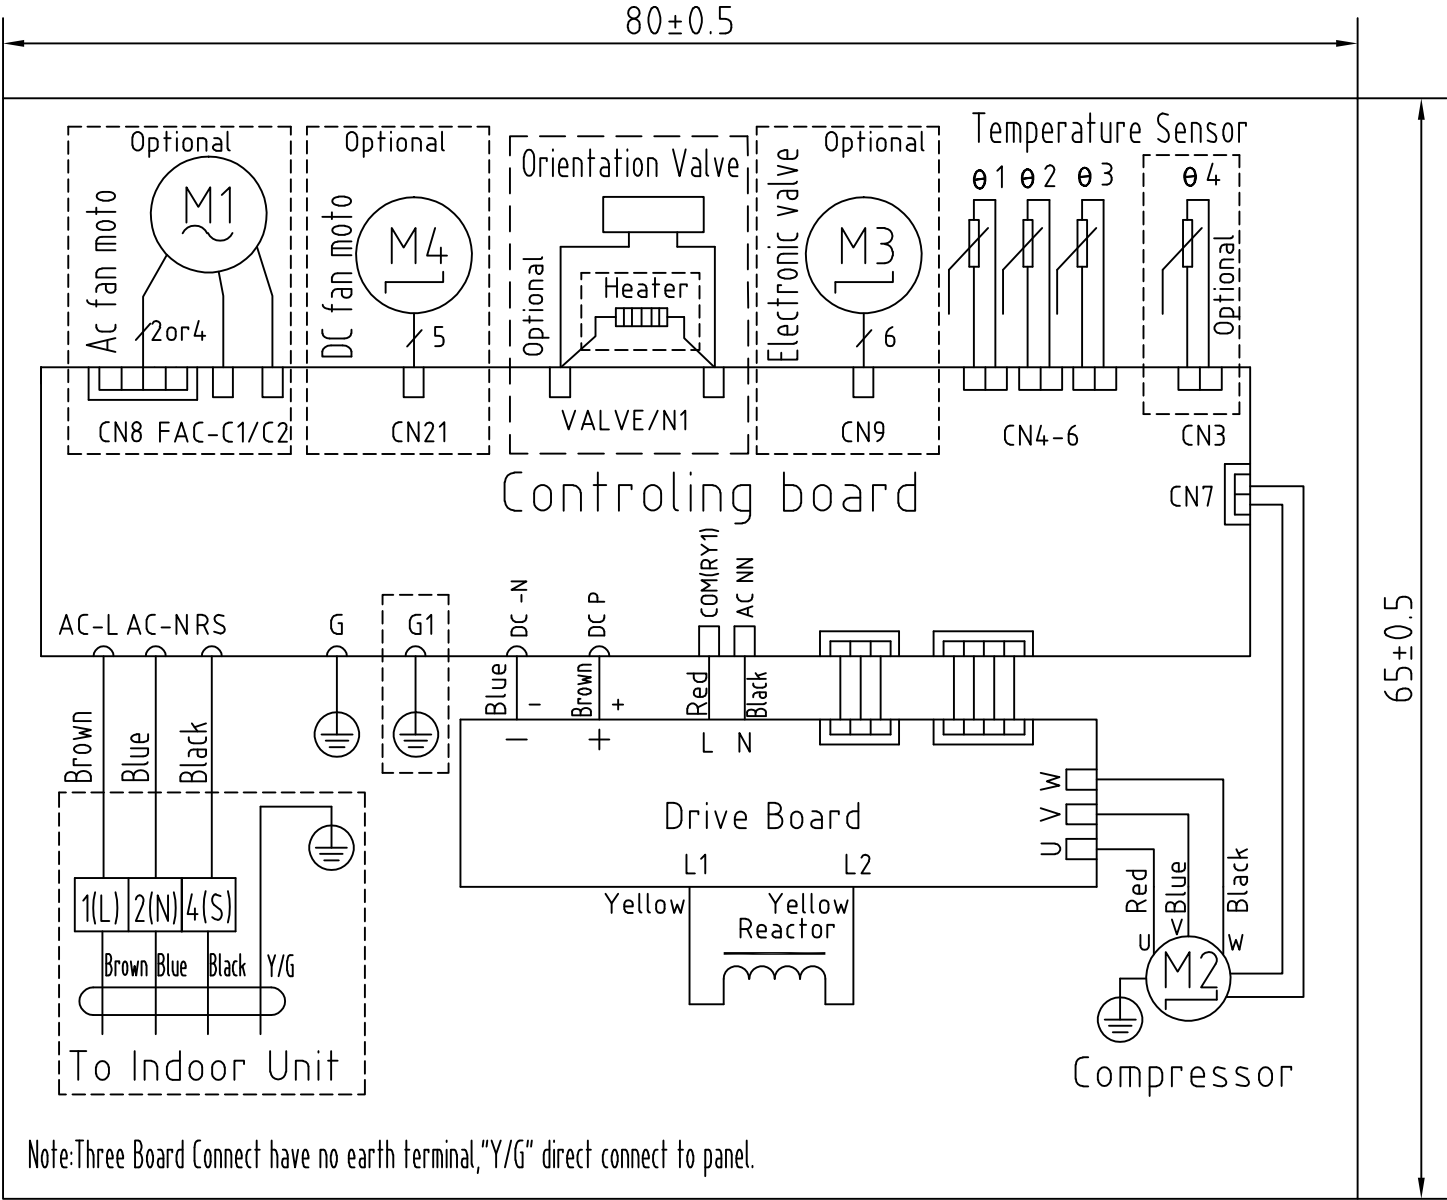

## Chapter 4 Troubleshooting Guide

### 4.1 Error Code

No.	Error Code	Problem
1	E1	Room temperature sensor fault
2	E2	Outdoor coil temperature sensor fault
3	E3	Indoor coil temperature sensor fault
4	E4	Indoor fan motor or DC motor feedback fault
5	E5	Indoor & outdoor communication fault
6	F0	Outdoor DC Fan motor fault
7	F1	IPM modular fault
8	F2	PFC modular fault
9	F3	Compressor operation fault
10	F4	Exhaust Temperature sensor fault
11	F5	Compressor top cover protection
12	F6	Outdoor ambient temp sensor fault
13	F7	Over/under voltage protection
14	F8	Outdoor modular communication fault
15	F9	Outdoor E <sup>2</sup> PROM fault
16	FA	Suction temperature sensor fault (4-way valve swich failure)

## **4.2 Troubleshooting Guide**

### **1. The Foremost Inspecting Items**

(1)The input voltage must be within +10% tolerance of the rated Voltage. If it is not the case, the air-conditioner will probably not work normally.

(2)Check the connecting cord between indoor unit and outdoor unit to see if it is properly connected. The connecting must be done according to the wiring diagram, please also notice that even different models may have the connecting cord of the same specification.

Please check if the marks at the connecting terminal and the marks on the cord can match, otherwise, the air-conditioner will not work normally.

(3)If the following phenomena are found, the problem is not from the air-conditioner itself.


<b>NO.</b>	<b>Problems</b>	<b>Causes</b>
1	The motor is heard operating but the air-conditioner dose not work when the indoor unit is powered on	Since the air-conditioner is powered on, it will come to working condition as long as you press the ON/OFF button of the remote control and the Signal is well received.
2	The compressor stops running but the indoor fan motor keeps working when it is at cooling mode with the indoor temperature higher than set temperature.	If you turn off the air-conditioner and restart it immediately, it will return to normal in 3 minutes, after that, the air-conditioner will automatically adjust the indoor fan speed to what you set.
3	The compressor works discontinuously at dehumidifying mode.	The air-conditioner will automatically control the working of the compressor according to the inside temperature
4	The air-conditioner does not work while the LED display is on.	The TIMER is set with the air-conditioner; it will be in hold on condition. If the TIMER setting is cancelled, the air-conditioner will return to normal working condition
5	The compressor works discontinuously at cooling and dehumidifying mode, and the indoor fan motor slows down.	The compressor stops internally or the fan motor slows down to prevent the indoor heat exchanger from being frozen.

## 2. No Power Display

### (1) Items

- Check if the input voltage is correct?
- Check if the AC power supply connecting is correct?
- Check if the output voltage of the manostat L7805 (IC2) is correct?

### (2) Trouble shooting procedure

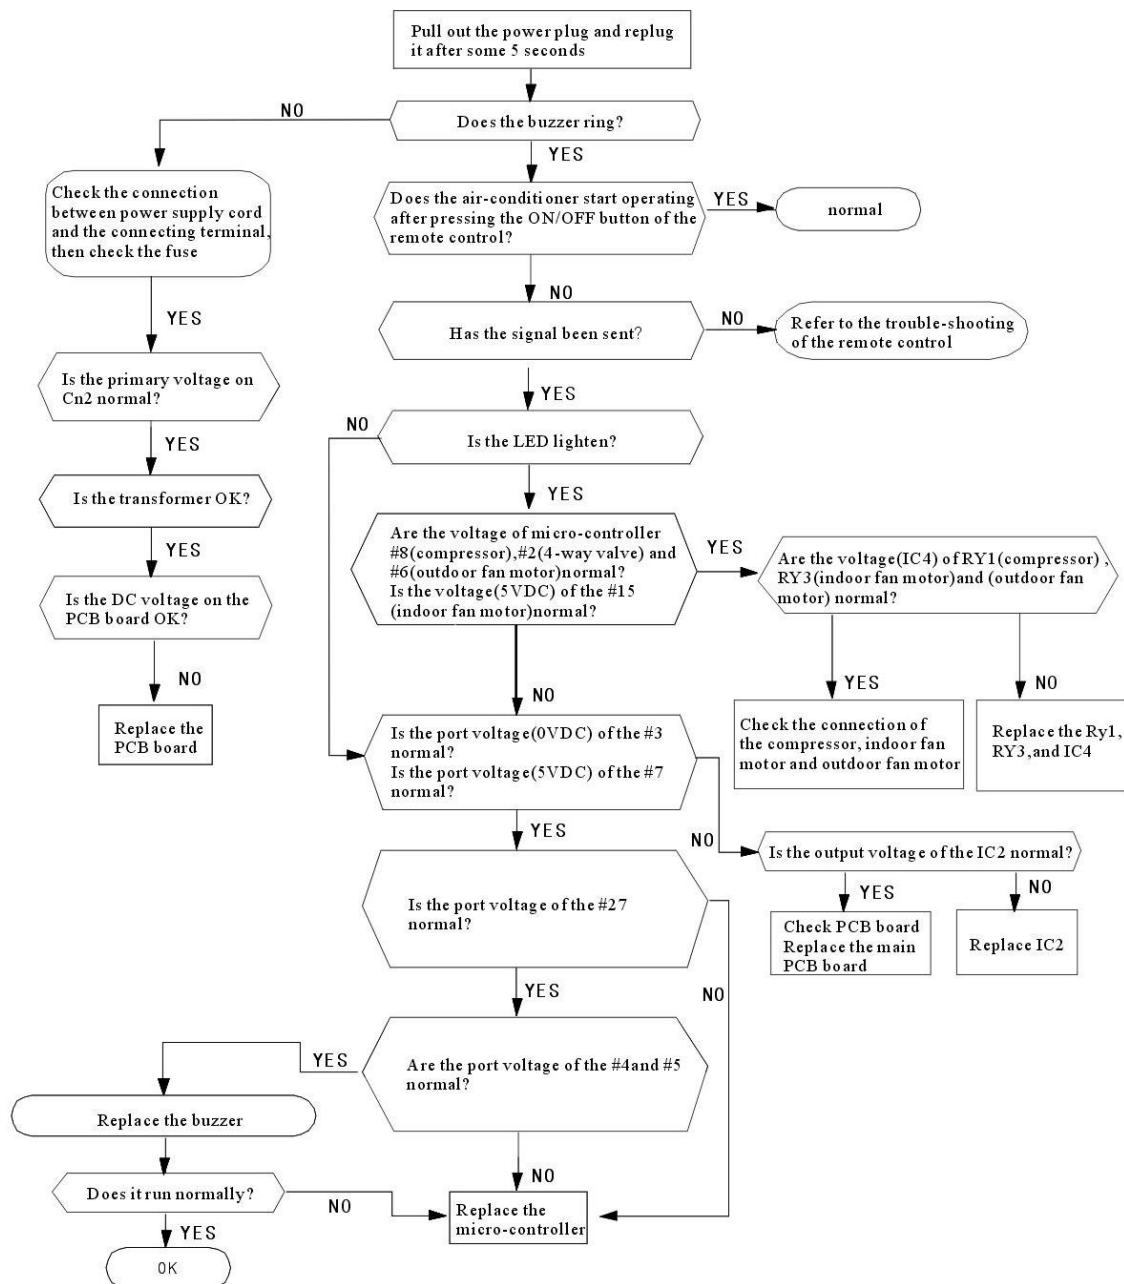

### 3. The Indoor Fan Motor Does Not Work


(1)Items

- a) Check if the indoor fan motor is connected correctly to the connector (CN8)?
- b) Check if the AC input voltage is correct?
- c) Check if the IC of indoor fan motor is connected correctly to the connector

(CN2)?

- d) Check if the capacity of indoor fan motor is connected correctly to the connector (CN8)?

(2)Trouble shooting procedure

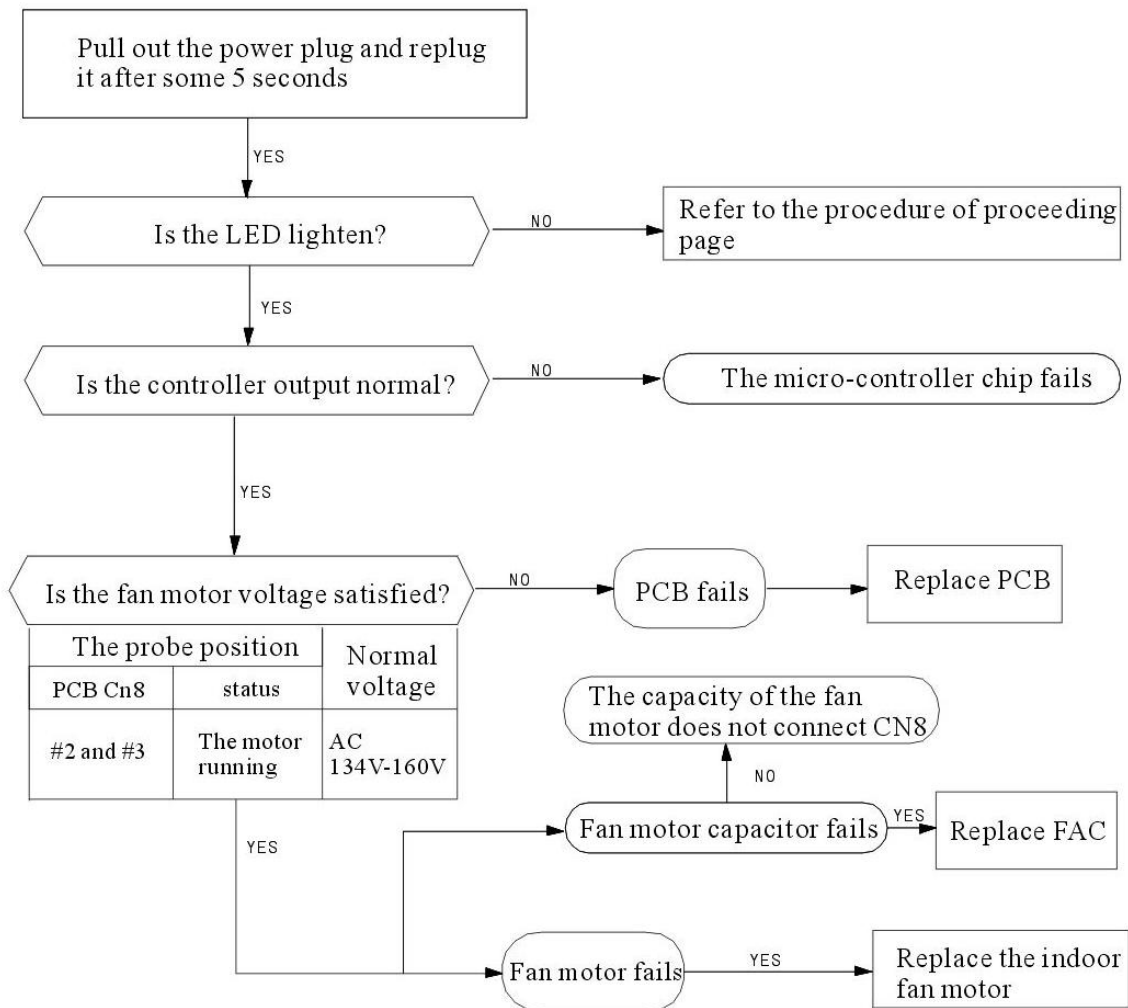


## 4. The Outdoor Unit Does Not Work

(1) Items

- a) Check if the input voltage is correct?
- b) Check if the wire connection of the outdoor connecting terminal is correct?

(2) Trouble shooting procedure

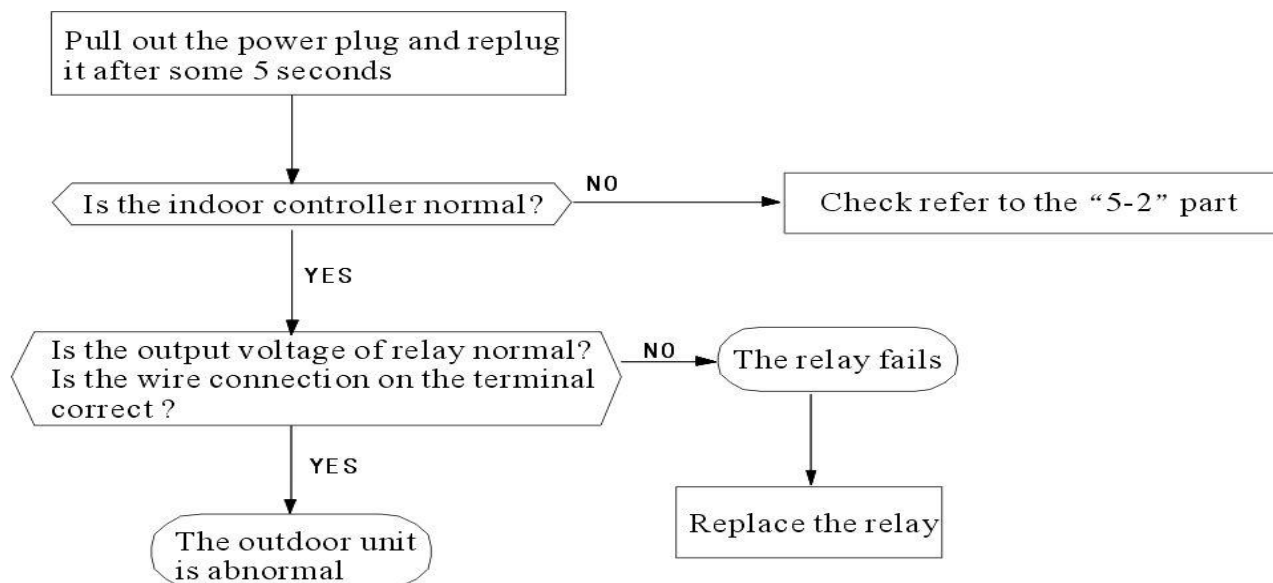




## 5. The Step Motor Does Not Work

(1)Items

a) Check if the input voltage is correct?

b) Check if the step motor controlling the up-down movement firmly connected to Cn2?


(2)Trouble shooting procedure

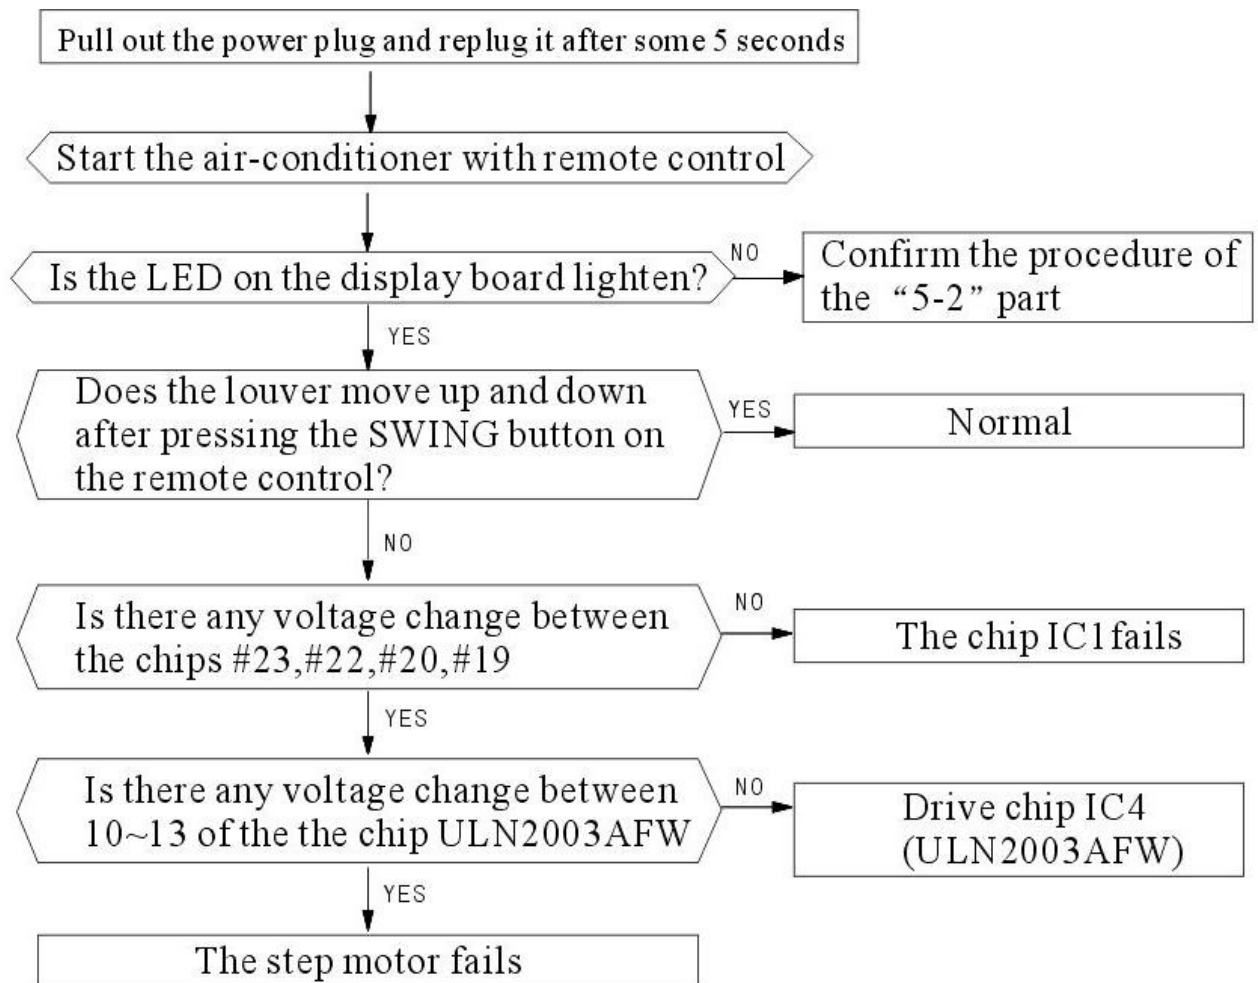

## 6. Heating Mode Can Work, But No Hot Air Blow

(1) Check if the set temperature is lower than the indoor temperature?

(2) Check if the indoor PCB is connected to the terminal correctly?

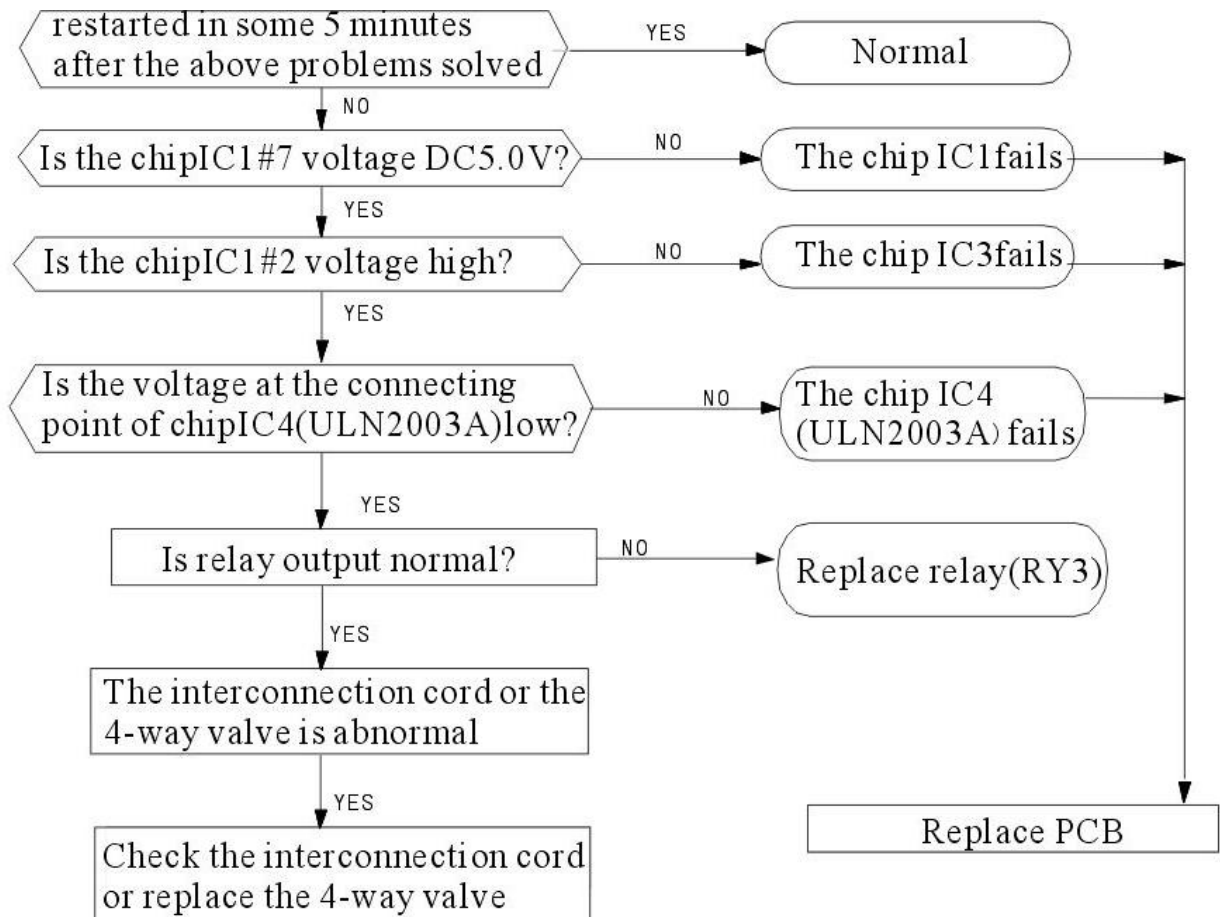

# 7. Remote Control Can Not Work

Trouble shooting rocedure

